



FROM CONCEPTS TO DONE!

EXCLUSIVELY AT



## PROJECT:

# WORKSTATION

With this plan we outline the steps needed to build your own workstation with Cardell® Concepts cabinetry and products from Menards. Maybe this will be used as your home office, an area for home schooling or a creative station for the kids.

Our workstation will be 36”h x 96”w x 25”d, and accommodates two 30” wide desk areas and plenty of drawer storage along with waste and recycling areas. The dimensions of your project will be based on the size of your area.

**ORDER ONLINE:**  
**USE MENARDS**  
**WE PULL – PICK UP**  
**FOR THIS PROJECT**



For this project we have selected the in-stock Cardell Concepts Lanston White cabinetry. The following additional door styles and finishes are available but may need to be special ordered.



Lanston  
White Foil



Lanston  
Grey Foil




Lanston  
Gunstock Foil



Arbon  
Rustic Hickory



Dobson  
Mirage

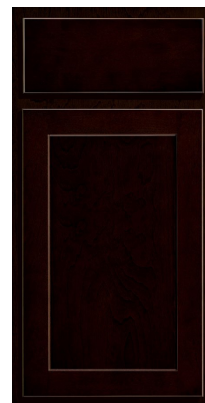

Mason  
Twilight

## PROJECT:

# WORKSTATION

### PREPARATION:

Prepare your area by removing obstacles located on the floor and walls that would hinder the construction of the workstation. You may want to consider removing any baseboard and shoe molding from where the workstation will be installed, replacing it once the project is completed.

### MATERIALS NEEDED:

The following items can be purchased online at Menards.com. **SIMPLY USE THIS LINK,** and all of the following items will be placed in your cart. Just review the items, their quantity, and add to cart. After you checkout, your order will then be assembled and ready for pick up using Menards 'We Pull – Pick Up' service. Just head to the order pick up area in the lumberyard and follow the signs.

- 1- Cardell® Cabinetry Concepts 18" Kitchen Base Cabinet BD18-3D (4847019)
- 1- Cardell® Cabinetry Concepts 18" Kitchen Base Wastebasket Cabinet BWBT18 (4847018)
- 1- Cardell® Cabinetry Concepts Toe Kick TKCL8 (4847033)
- 4- Cardell® Cabinetry Concepts Cabinet Filler WF3-3 (4847029)
- 1- Varathane® White Wood Fill Stick (5553914)
- 1- Butcher Block Countertop 25" x 96" x 1 1/2" (4857017)
- 1- Varathane® Fast Dry Stain Kona (5552946)
- 1- Varathane® Satin Oil-Based Interior Polyurethane (5553361)
- 5- Hickory® Hardware American Diner Collection Cabinet Knob (4881192)

### TOOLS NEEDED TO COMPLETE THE PROJECT:

- Measuring tape
- Level
- Cabinet Screws
- Hammer
- Brad Nails
- Shims
- Power Drill / Screwdriver (slotted & Phillips)
- Brushes (stain & polyurethane)

### HOW-TO PROCESS:

1. Stain butcher block top with Varathane Fast Dry Stain Kona and seal with Varathane Oil-Based Interior Polyurethane following manufacturer's directions.
2. Remove drawers and secure both cabinets together
3. Center cabinets in the middle of your area and secure into studs in wall. Use shims to level cabinets if necessary.
4. Set the finished butcher block on top of the cabinets, secure to cabinets from underneath using screws.  
\*Make sure screws are the proper length so they don't go through the top.
5. Mount fillers to the side and back walls to support butcher block top, making sure top is level. Trim 2 filler pieces to be the length between the wall and cabinet and secure to back wall. Trim 2 filler pieces to 24" and secure into studs in wall at each side.
6. Attach Toe Kick to base of cabinets, mitering the corners and attaching with brad nails.
7. Fill nail holes on toe kick using Varathane White Wood Fill Stick, following manufacturer's direction for application.

